



Heated by



ewool 10 and 20 heated systems

User manual

Table of contents

Operation	3
Garment care and safety	4
Battery care, safety and charging	5

Operation

Charging the battery

The battery must be fully charged before first use. See page 5 for instructions.

Using the battery

After fully charging the battery, connect it to the garment using the USB-C cable inside the left pocket for vests and jackets, and the right pocket for shorts.

Finding the control button

The control button (1) is located on the bottom-left side for vests and jackets (2), and on the right leg (3) for shorts.



Controlling your heated garment

To power on or off, press and hold the button for 3 seconds.

To change the temperature, press the button once.


To control via Bluetooth, visit <https://ewool.com/support> to download the app.

Three (3) heat levels

High - Red light

Normal - Orange light

Low - Yellow light

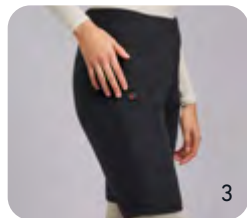

Garment

Care and safety

- Do not wear on bare skin. Always wear a base layer under the heated garment.
- Never use third-party accessories.
- Only use batteries with a USB-C port supporting PD 18W (12 V / 1.5 A).
- Do not modify in any way.
- Never use if the outside temperature is above 20 °C (70 °F).
- Not intended for use by children or incapacitated individuals.
- Never use in an oxygen-enriched environment.
- Never use if there are broken wires or damaged parts.
- Immediately stop use if you experience skin irritation or discomfort.
- Ensure the garment is dry before use.
- Turn off power before charging.
- Never wear the garment while charging.
- Turn off power after use.

Wash instructions

- Remove the battery before washing.
- Wash in cold water.
- Use a delicate/gentle cycle.
- Hang to dry.
- Do not dry clean.
- Do not bleach.
- Do not iron.
- Do not tumble dry.
- Do not wring.

Maximizing performance in cold weather

Heated garments work best when worn close to the body over a thin base layer.

For extra warmth, wear an insulating outer layer.

Turn off the garment when not in use to preserve battery life.

Battery

Care and safety

- The battery must be fully charged before first use.
- Always remove the battery from the garment pocket before charging.
- Disconnect the battery when not in use for extended periods.
- Ensure the battery is fully charged before storing.
- Warm the battery to a temperature above 10 °C (50 °F) before charging.
- Unplug the charger once the battery is fully charged.
- At cold temperatures, lithium batteries provide reduced capacity.
- Never use the battery if it shows swelling, damage, or if it overheats during charging.
- The battery lifespan is approximately 300 cycles.

Charging the battery

- Remove the battery from the garment and charge it using a USB-C charger.
- For optimal charging performance, use a fast-charging USB-C charger.

Enjoy the warmth.

ewool.com